


### 26.Heater Duct

#### A: REMOVAL


##### 1. FRONT HEATER DUCT

- 1) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the catch and detach the front heater duct (A).

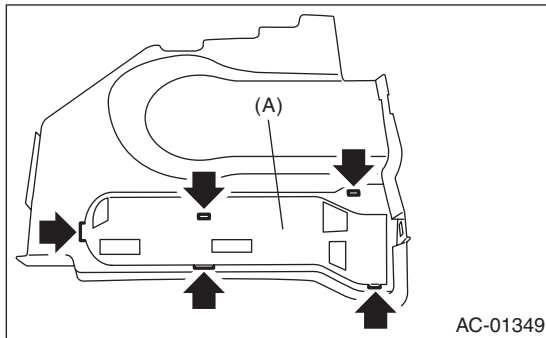

##### 2. REAR HEATER DUCT

- 1) Remove the heater cooling unit. <Ref. to AC-38, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the front seats. <Ref. to SE-7, REMOVAL, Front Seat.>
- 3) Remove the front side sill cover.
- 4) Pull off the floor mat to remove the rear center heater duct (A) and rear heater duct LH, RH (B).

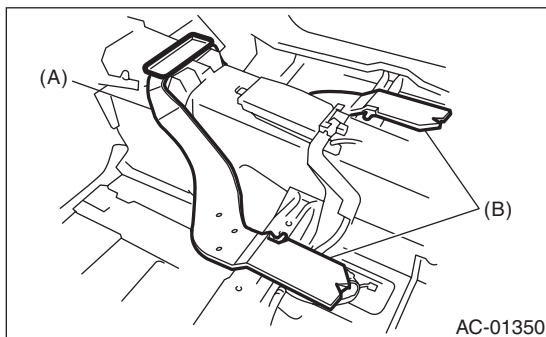

#### B: INSTALLATION

Install in the reverse order of removal.